Optional Accessories

Escutcheon

INSTALLER:

Refer to Installation, Operation, and Mainece Manual for Linear Steam Head Residential Model 104480, PUR103936" for installation of Linear Steam Head, 104480, prior installation of any optional accessories.

CAUTION Because direct steam is very hot, the Escutcheon will be hot during the steam session, and will remain hot for a period of time after steam session.

Escutcheon is a decorative accessory and is available in (8) finishes. It's larger than Linear Steam Head's standard Faceplate and it's manufactured in solid brass.

Installation Instruction


- Apply silicone to the front of Linear Steam Head and firmly press the faceplate against the face of the steam head, (see fig 2).
- Secure the faceplate as required until the silicone sets.
- Apply silicone into the gap between the faceplate and the wall materials as required to create a moisture seal, (see fig. 3).

CAUTION Failure to properly install Escutcheon may result in a leak within the wall cavity and cause problems associated with leaks, moisture and property damage from leaks.

Finish

Brush Bronze
Brush Nickel
Polish Brass
Polish Chrome

- □ Matte Black □ Polish Nickel
- Oil Rub Bronze
- Satin Brass

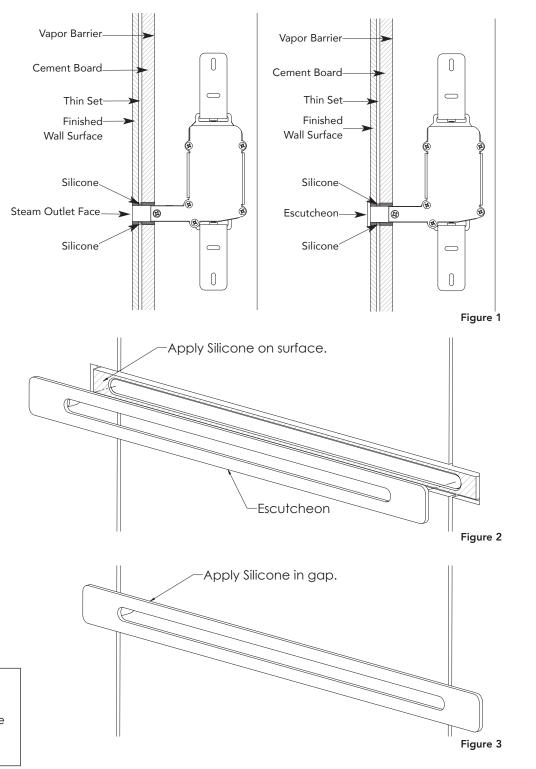

NOTE: Drawings are for illustrative purposes only. Consult with qualified designer, architect or contractor for steam room construction.

mr.steam[®] Sussman-Automatic Corp® **hello@mrsteam.com www.mrsteam.com** 43-20 34th Street, Long Island City, NY 11101 tel: 1 800 76 STEAM 9410 S. La Cienega Blvd. Inglewood CA 90301 tel: 1 800 72 STEAM

PUR 103937 Rev 10.20

Part # 104485

mr.steam®

(continue on next page)

Linear Steam Head®

mr.steam®

Optional Accessories Part # 104486 **Finished Diverter CAUTION** Because direct steam is very hot, the diverter will be hot during the Rubber Extensions steam session, and will remain hot for a period of time after steam session. Never install, remove or adjust a diverter when the steam head is hot or if steam generator is turned on. Installing, removing or adjusting when the steam head is hot or if the steam generator is turned on may cause a burn hazard and personal injury. Diverter with decorative finish. Finished Diverter is used to reduce the steam emission zone as required to avoid contact between a steam bather and direct steam emissions. It is available in (8) finishes." Figure 4 Installation Instruction Securely press the two rubber extensions into the opening of Linear Steam Head's Fae Plate or Escutcheon and push in firmly until the diverter is securely in place. Steam Emission Diverter with decorative finish. 3 With \bigcirc Diverter Finish Finished Brush Bronze Polish Brass Wall 6"-12" Brush Nickel Polish Chrome Above Floor Steam Emission Zone □ Matte Black Polish Nickel Oil Rub Bronze Satin Brass Steam Room Interior

NOTE: Drawings are for illustrative purposes only. Consult with qualified designer, architect or contractor for steam room construction.

For Installation assistance please call Customer or Technical support: East Coast 1-800-767-8326 West Coast 1-800-727-8326 To view an installation video please go to: www.mrsteam.comThis video is for added visual assistance only. Do not install the Linear Steam Head using the video. Use only these installation instructions for a safe and problem free installation.